

SAFETY RECALL

Graco Children's Products Inc. All Harmony™ High Chairs


The screws holding the front legs can loosen and fall out and/or the plastic bracket on the rear legs can crack causing the high chair to become unstable and tip over unexpectedly, posing a fall hazard to children.

Harmony™ High Chair Model Numbers

Model Numbers: 3920BAN, 3920BAN2, 3920BEB, 3920BEBB, 3920COV, 3920DOH, 3920GEI, 3920GEIDSP, 3920GRN, 3920HMP, 3920IVY, 3920LAU, 3920PKR, 3930DDH, 3930DHO, 3935CAL, 3935OXB, 3935PKR, 3935PKRDSP, 3935SPM, 3935SPMDSP, 3935THR, 3935THR2, 3935THR3, 3940BIA, 3940BIADSP, 3940CAP, 3940CLE, 3940COT, 3940DRM, 3940HML, 3940MCH, 3940NGS, 3940SAV, 3940SLT, 3940SPT, 3940STA, 3940UNN, 3951CLO, 3951CLT, 3951COT, 3951ORC, 3951WLO, 3955WSR, 3960BGN, 3960CJG, 3960CNP, 3960GGG, 3980CNR, 3E00ABB, 3E00BAT, 3E00DCF, 3E00DCF DSP, 3E00DGP, 3E00DGPDSP, 3E00GPK, 3E01BDS, 3E01BDSCA, 3E01DNY, 3E01DNY1 3E01ELP, 3E01ELPDSP

Note: These model numbers may begin with the letter A, B, C, or D

Additional Models: 1752404, 1755859, 1755860, 1757259, 1757412, 1760429

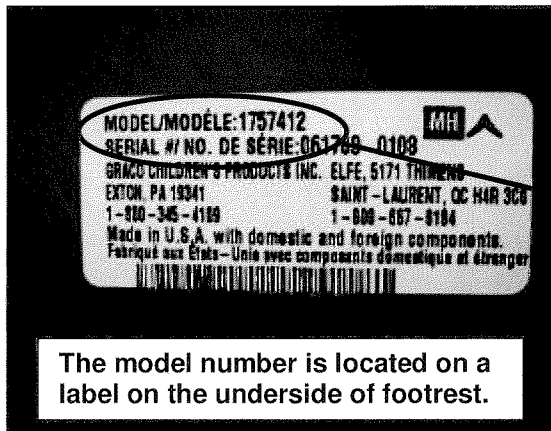

Immediately stop using these high chairs and contact Graco to receive a free repair kit at:

1-877-842-3206 or visit
www.gracobaby.com